

Manual Nr.: Date
TFA-M-001 12.02.2016

Rev. Nr. - date

# **MANUAL**

# **MARINE HEATER – TELCO T2RIB**





N.7580 Selbu, Norge Phone + 47 73 81 20 90 Fax: +47 73 81 74 95 e-mail: info@telco.no



**Get In Touch** 

**Call:** 0845 6880112

Email: info@adremit.co.uk



Туре	EI number 230V	EI number 400V	EI number 115V	EI number 440V	Power	Height inkl. grille	Length	Depth	Description
T2RIB 025	54 494 56	54 494 57	54 494 58	54 494 59	250 W	238 mm	379 mm	96 mm	Ship heater with
T2RIB 03	54 494 60	54 494 61	54 494 62	54 494 63	300 W	238 mm	379 mm	96 mm	power switch
T2RIB 04	54 494 64	54 494 65	54 494 66	54 494 67	400 W	238 mm	379 mm	96 mm	Bi-metal
T2RIB 05	54 494 08	54 494 09	54 494 10	54 494 11	500 W	238 mm	474 mm	96 mm	thermostat,
T2RIB 08	54 494 68	54 494 69	54 494 70	54 494 71	800 W	238 mm	629 mm	96 mm	Thermal cut-out
T2RIB 10	54 494 16	54 494 17	54 494 18	54 494 19	1000 W	238 mm	869 mm	96 mm	and protection
T2RIB 12	54 494 72	54 494 73	54 494 74	54 494 75	1200 W	238 mm	869 mm	96 mm	grille.
T2RIB 16	54 494 76	54 494 77	54 494 78	54 494 79	1600 W	238 mm	1134 mm	96 mm	
T2RIB 20	54 494 90	54 494 91	54 494 92	54 494 93	2000 W	238 mm	1395 mm	96 mm	



#### **Specifications**

 $Flow-through\ marine\ heater\ with\ on/off\ switch,\ bi-metal\ thermostat,\ thermal\ cut-out\ and\ protection\ grille.$ 

230 V, 400V, 115V, 440

Colour: RAL 9016 White

Connection: Right-hand side

 $Fitting \ to \ walls: \ Heaters \ must \ be \ fitted \ horizontally \ and \ are \ delivered \ with \ solid \ wall \ brackets.$ 

Max. surface temperature: 69°C

Classification: IP 44. This heater is particularly suited for use in damp environment, e.g. bathrooms and toilets

Installation distance requirements	T2RIB			
Minimum distance to side wall:	2 cm			
Minimum distance to floor:	5 cm			
Minimum distance to ceiling or window sill:				



N.7580 Selbu, Norge

Phone + 47 73 81 20 90 Fax: +47 73 81 74 95 e-mail: info@telco.no



**Get In Touch** 

**Our Address** 

**Call:** <u>0845 6880112</u>

Email: info@adremit.co.uk

Settle, North Yorkshire, BD24 9RH



### Installation instructions for marine heater T2RIB

#### The heater must only be installed by authorized electricians.

- 1. Fasten the heater to the wall. Screws are provided
- 2. Remove the thermostat knob and the front cover of the distribution box.
- 3. Connect to a 4-pole terminal.
- 4. Connect the earth lead to the earth sign on terminal.
- 5. Replace the front cover and put the thermostat knob back in place

#### **Installation distance requirements:**

Minimum distance to side wall:2,0 cm.Minimum distance to floor:2,0 cm.Minimum distance to roof or window sill:38,0 cm.

The heater must not be located immediately below a socket outlet.


 $Heaters\ used\ in\ bathrooms\ must\ be\ installed\ so\ that\ switches\ and\ other\ controls\ cannot\ be\ touched\ by\ a\ person\ in\ the\ bath\ or\ shower.$ 

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance

WARNING: In order to avoid overheating, do not cover the heater.

Type	Power	A	В	$L_1$	$L_2$	Н	Height incl. grille
T2RIB 025	250 W	96 mm.	Min. 20 mm.	379 mm.	285 mm.	150 mm.	238 mm.
T2RIB 03	300 W	96 mm.	Min. 20 mm.	379 mm.	285 mm.	150 mm.	238 mm.
T2RIB 04	400 W	96 mm.	Min. 20 mm.	379 mm.	285 mm.	150 mm.	238 mm.
T2RIB 05	500 W	96 mm.	Min. 20 mm.	474 mm.	380 mm.	150 mm.	238 mm.
T2RIB 08	800 W	96 mm.	Min. 20 mm.	629 mm.	535 mm.	150 mm.	238 mm.
T2RIB 10	1000 W	96 mm.	Min. 20 mm.	869 mm.	775 mm.	150 mm.	238 mm.
T2RIB 12	1200 W	96 mm.	Min. 20 mm.	869 mm.	775 mm.	150 mm.	238 mm.
T2RIB 16	1600 W	96 mm.	Min. 20 mm.	1134 mm.	1040 mm.	150 mm.	238 mm.
T2RIB 20	2000 W	96 mm.	Min. 20 mm.	1395 mm.	1295 mm.	150 mm.	238 mm.

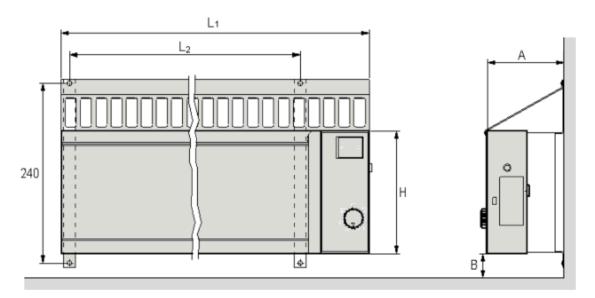



TELCO FABRIKKER AS N.7580 Selbu, Norae

Phone + 47 73 81 20 90 Fax: +47 73 81 74 95 e-mail: info@telco.no



**Get In Touch** 

**Our Address** 



## **Operation instructions for marine heater T2RIB**

#### The heaters operation panel is on the right side, and contains two items:

- The on/off switch.
   Push the switch down on the "1" side of the switch to set the power on.
   Push the switch down on the "0" side of the switch to set the power off.
- The thermostat wheel.
   Adjust the room temperature, by turning the thermostat wheel, to the preferred temperature on the scale from 5°C to 35°C.



# Cleaning / Maintenance instructions for marine heater T2RIB

The area behind and under the heater should be vacuum cleaned regularly and the surface wiped with a damp cloth using standard cleaning products.



N.7580 Selbu, Norge

Phone + 47 73 81 20 90 Fax: +47 73 81 74 95 e-mail: info@telco.no




**Get In Touch** 

Our Address



# WIRING DIAGRAM FOR MARINE HEATER T2RIB

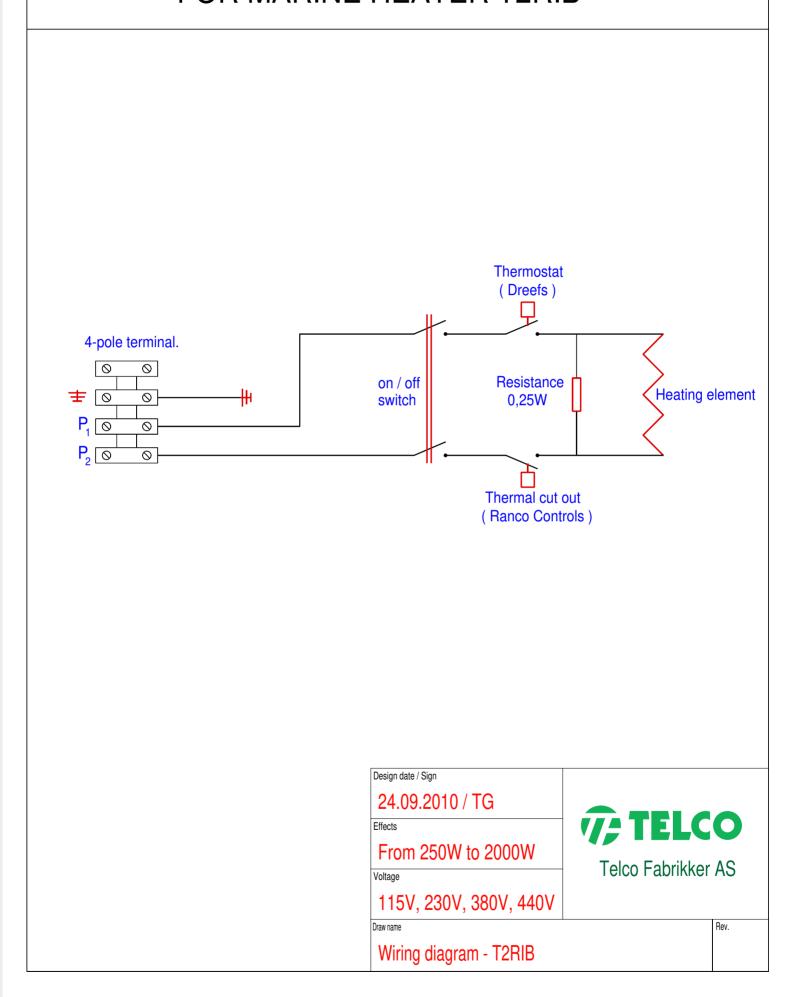



**Get In Touch** 

**Call:** <u>0845 6880112</u>



Email: info@adremit.co.uk



## Trouble shooting instructions for marine heater T2RIB

#### If the heater is not longer working, check this:

T2RIB have a built-in safety system, a thermal cut-out, to prevent the heater from overheating. This mechanism will switch off the power should the heater become covered. If this happens, remove the item covering the heater and press the reset button to restart the heater. The reset button is located on the right end side of the heater.

Any problem that can't be fixed by resetting the thermal cut-out, please contact the producer:

Telco Fabrikker AS Ausa industriområde 7580 Selbu NORWAY

Phone: +47 73 81 20 90 Fax: +47 73 81 74 95 E-mail: info@telco.no

#### Information about utilization of marine heater T2RIB

- Heaters do not contain any parts or particles made of hazard materials and cannot make any harm to the environment.
- Heaters should not be utilized with household waste.
- Heaters should be utilized in according to local Regulations and Standards.

#### Information about warranty of marine heater T2RIB

- Telco Fabrikker AS offer a two-year warranty on all our products.



Phone + 47 73 81 20 90 Fax: +47 73 81 74 95 e-mail: info@telco.no



**Get In Touch** 

Our Address